

 
 

 








 

 



 

 

 
 
 

 
 
 
 
 
 



 
 

 



 



 
 
 

 
 
 

 
 
 
 
 
 



 






Original	Replacement	Original	Replacement
 Power	 Power	 5	 5
 Stereo/Mono	 Audio	 6	 6
 RDS/Display	 INFO	 7	 7
 PTY	 TV/R	 8	 8
 Intro	 MEDIA	 9	 9
 Random	 Subt.	 0	 0
 Repeat	 TEXT	 Mute	 MUTE
 Timer Set	 MENU	 Vol+	 VOL +
 Timer On/Off	 EXIT	 Vol-	 VOL -
 Sleep	 VOD	 Up	 UP
 EQ/X-Bass	 V-FOR	 Down	 DOWN
 File Search	 SRC	 >> /Search/Skip/Tuning+	 Last
 Program	 OPT+	 <</Search/Skip/Tuning-	 First
 1	 1	 Enter	 OK
 2	 2	 Tuner/Band	 Red (A)
 3	 3	 Tape	 Green (B)
 4	 4	 CD	 Yellow (C)





Original		Replacement		Original		Replacement	
	Up/P.Call+		CH +				
	Down/P.Call-		CH -				
	Rec		Rec				
	Play		Play				
	Pause		Pause				
	Stop		Stop				

