

 

 





 







 











 

 

 

 





 

 









 



 







 








 
 
 

 








 






 



Original		Replacement		Original		Replacement	
	Power		Power		9		9
	Open/Close		Eject / Surround		Vol+ Tv		Vol+
	Power Tv		Shift + Power		Tv/DVD		Smart / List
	DVD		Shift + 2		0		0
	HDD		Shift + 7		Mute Tv		Mute / Dimmer
	AV		AV / Input / RDS		Vol- Tv		Vol-
	Av Tv		Shift + AV / Input / RDS		Display		Display / Media
	1		1		Text		Text / Goto
	2		2		Tv/Radio		Tv/Radio /
	3		3		Rec		Rec / Rec Mode
	PR+ Tv		CH+ / Page+		Zoom		Zoom / Size
	4		4		Repeat		Shift + Green / APP /
	5		5		<<		<< / Tune-
	6		6		>>		>> / Tune+
	PR- Tv		CH- / Page-		I<<		I<< / Preset-
	7		7		>>I		>>I / Preset+
	8		8		Pause/Step		Pause / Step / Freeze





Original		Replacement	
	Play		Play / Slow
	Stop		Stop / Hold
	Home		Menu / Home
	Up/PR+		Up
	Menu/List		D.Menu / Top
	Left		Left
	Enter		OK
	Right		Right
	Guide		Guide / EPG / -/--
	Down/PR-		Down
	Return		Back / Return
	Red/FAV		Red / Netflix / Search
	Green/Audio		Green / APP / Repeat
	Yellow/Subtitle		Yellow / YouTube / Repeat
	Blue/Timeshift		Blue / Prime Video / Random
	Marker		Fav / Marker / PC
	Search	 + 	Shift + Red / Netflix / Search

Original		Replacement	
	Dubbing		Audio / Lang I/II
	Clear		Exit / Cancel / Clear
	Title		Sound / Title
	Thumbnail		Setup / OPT /
	Random	 + 	Shift + Blue / Prime
	CHP.ADD		Subtitle / EQ
	PIP		Picture / Format

