

 







 



 



 





 



 

 

 

 

 

 



 













 

 

 

 









Original	Replacement	Original	Replacement
	Power		Power
	Open/Close		Eject / Surround
	Input Function		TV/Radio /
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	Clear		Exit / Cancel / Clear
	0		0
	Repeat		Shift + Green / APP /
	I<< Skip		I<< / Preset-
	<< Scan		<< / Tune-

Original	Replacement	Original	Replacement
	>> Scan		>> / Tune+
	>>I Skip		>>I / Preset+
	Stop		Stop / Hold
	Play		Play / Slow
	Pause		Pause / Step / Freeze
	Speaker Level		Setup / OPT /
	Vol+		Vol+
	Optical/Tv Sound		Smart / List
	Sound Effect		Shift + Sound / Title
	Vol-		Vol-
	Mute		Mute / Dimmer
	Home		Menu / Home
	3D Sound		Shift + 3
	Info/Menu		Shift + Menu /
	Info/Menu		Info / Angle
	Left/Tuning-		Left
	Left/Tuning-		Shift + << / Tune-

Tune-





Original	Replacement
Up/Presets+	Up
Up/Presets+	Shift + >> / Presets+
Enter	OK
Right/Tuning+	Right
Right/Tuning+	Shift + >> /
Down/Presets-	Down
Down/Presets-	Shift + <<< / Presets-
Back	Back / Return
Title/Pop Up	Sound / Title
Disc Menu	D.Menu / Top
Red/RDS	Red / Netflix / Search
Red/RDS	Shift + AV / Input / RDS
Green/PTY	Green / APP / Repeat
Yellow/PTY Search	Yellow / YouTube / Repeat
Blue/Mono/Stereo	Blue / Prime Video / Random
Subtitle	Subtitle / EQ
Audio	Audio / Lang I/II

Original	Replacement
Sleep	Sleep / Timer
Music ID	Text / Goto
Power TV	Shift + Power
Vol+ Tv	Shift + Vol+
CH+ Tv	CH+ / Page+
AV Input Tv	AV / Input / RDS
Vol- Tv	Shift + Vol-
CH- Tv	CH- / Page-

