

 
 



 

 





 



 



 

 

 

 







Original	Replacement
 Power	 Power
 Open/Close	 Eject / Surround
 Power Tv	 Shift + Power
 AV Tv	 AV / Input / RDS
 1	 1
 2	 2
 3	 3
 PR+ Tv	 CH+ / Page+
 4	 4
 5	 5
 6	 6
 PR- Tv	 CH- / Page-
 7	 7
 8	 8
 9	 9
 Vol+ Tv	 Vol+
 0	 0

Original	Replacement
 Mute Tv	 Mute / Dimmer
 Vol- Tv	 Vol-
 <<	 << / Tune-
 >>	 >> / Tune+
 I<<	 I<< / Preset-
 I>>	 I>> / Preset+
 Pause/Step	 Pause / Step / Freeze
 Play	 Play / Slow
 Stop	 Stop / Hold
 Display	 Display / Media
 Up	 Up
 Setup	 Setup / OPT /
 Left	 Left
 Enter	 OK
 Right	 Right
 Disc Menu	 D.Menu / Top
 Down	 Down





Original	Replacement
Power	Power
Eject	Eject / Surround
AV	AV / Input / RDS
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
Tv/VCR	TV/Radio /
0	0
<<	<< / Tune-
>>	>> / Tune+
Pause/Step	Pause / Step / Freeze

Original	Replacement
Play	Play / Slow
Stop	Stop / Hold
CLK/CNT	Display / Media
Up	Up
PR/TRK+	CH+ / Page+
i	Info / Angle
Left	Left
Enter	OK
Right	Right
PR/TRK-	CH- / Page-
Down	Down
O)))/Audio	Audio / Lang I/II
Rec/ITR	Rec / Rec Mode
Lock	Back / Return
Search	Red / Netflix / Search
Clear	Exit / Cancel / Clear
Repeat	Green / APP / Repeat



