 


 
 


 

 
 

 


 

 
 


 
 

 
 

 



 
 
 


 


 








 









	Original	Replacement		Original	Replacement
	Power				Up
	Guide				Down
	[]/Ratio				Right
	Info				Left
	Input				Ok
	1				Settings/List
	2				Back
	3				Exit
	4				Q.Menu
	5				FAV
	6				Mute
	7				Simplink
	8				Q.View
	9				Energy/Saving
	0				AV Mode
	--		List		Vol+
	TV		TV/R		Vol-

	Original	Replacement		Original	Replacement
	Up				TV
	Down				DVD
	Right				SAT
	Left				AUX
	Ok				PLAY MODE
	Settings/List		Menu		REC MODE
	Back		Back		TV
	Exit		Exit		DUAL
	Q.Menu		D. Menu		SUBT
	FAV		Pre Ch		OPT
	Mute		Mute		SOUND
	Simplink		Media		AD
	Q.View		Options		PICTURE
	Energy/Saving		3D		ECO
	AV Mode		Format		3D
	Vol+		Vol +		REPEAT
	Vol-		Vol -		ZOOM





Original		Replacement		Original	Replacement
	CH+		Ch +		
	CH-		Ch -		
	Red		Red		
	Green		Green		
	Yellow		Yellow		
	Blue		Blue		
	Stop		Stop		
	Play		Play		
	Pause		Pause		
	<<		<<		
	>>		>>		

