







 





 













 

 







Original	Replacement
 Power	 Power
 Tv/Rad	 TV/Radio /
 Source	 AV / Input / RDS
 *	 D.Menu / Top
 Live Zoom	 Zoom / Size
 Subtitle	 Subtitle / EQ
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 List	 Smart / List
 0	 0

Original	Replacement
 Guide	 Guide / EPG / -/--
 Vol+	 Vol+
 Info/Quick Access	 Info / Angle
 P+	 CH+ / Page+
 Vol-	 Vol-
 Search	 Picture / Format
 P-	 CH- / Page-
 Mute	 Mute / Dimmer
 Netflix	 Shift + Red / Netflix /
 Home	 Menu / Home
 Amazon	 Shift + Blue / Prime
 Back	 Back / Return
 Up	 Up
 Exit	 Exit / Cancel / Clear
 Left	 Left
 OK	 OK
 Right	 Right





	Original	Replacement	Original	Replacement
	Text	Text / Goto		
	Down	Down		
	T.Opt	Setup / OPT /		
	AD/*	Audio / Lang I/II		
	Rec/*	Rec / Rec Mode		
	Stop	Stop / Hold		
	<<	<< / Tune-		
	Play	Play / Slow		
	Pause	Pause / Step / Freeze		
	>>	>> / Tune+		
	Red	Red / Netflix / Search		
	Green	Green / APP / Repeat		
	Yellow	Yellow / YouTube / Repeat		
	Blue	Blue / Prime Video / Random		

