



Original	Replacement
 Power	 Power
 USB/My Media	 Media
 Input	 AV
 Stop	 Stop
 Play	 Play
 Pause	 Pause
 <<<	 <<<
 >>>	 >>>
 L/R	 TV/R
 Edge Adj	 Eject
 Sound	 Dual
 Sleep	 Sleep
 Picture	 Shift + Format
 Eco	 Shift + 3D
 Blank	 Pre Ch
 Ratio	 Format
 3D	 3D

Original	Replacement
 Vol+	 Vol +
 Vol-	 Vol -
 Mute	 Mute
 Page Up	 Ch +
 Page Down	 Ch -
 Settings	 Options
 Still	 Text
 Q.Menu	 D. Menu
 Back	 Back
 Auto	 Info
 Exit	 Exit
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left
 OK	 Ok
 Red	 Red



