



 








Original	Replacement
Power	Power
Eject/Open/Close	Eject / Surround
Power Tv	Shift + Power
DVD	Shift + 2
VCR	Shift + 4
Av Input	AV / Input / RDS
AV Input Tv	Shift + AV / Input / RDS
1	1
2	2
3	3
PR/CH+ Tv	CH+ / Page+
4	4
5	5
6	6
PR/CH- Tv	CH- / Page-
7	7
8	8

Original	Replacement
9	9
Vol+ Tv	Vol+
I.Skip	Blue / Prime Video / Random
0	0
Dubbing	Yellow / YouTube / Repeat
Vol- Tv	Vol-
<<	<< / Tune-
>>	>> / Tune+
I<<	I<< / Preset-
>>I	>>I / Preset+
Pause/step	Pause / Step / Freeze
Play	Play / Slow
Stop	Stop / Hold
Home	Menu / Home
Up/PR/CH/(TRK)	Up
Disc Menu/List	D.Menu / Top
Disc Menu/List	Smart / List





Original	Replacement
 Left	 Left
 Enter	 OK
 Right	 Right
 Display	 Display / Media
 Down/PR/CH/TRK	 Down
 Return	 Back / Return
 O)/Audio	 Audio / Lang I/II
 Subtitle	 Subtitle / EQ
 Zoom	 Zoom / Size
 CHP.Add	 Green / APP / Repeat
 Rec	 Rec / Rec Mode
 Rec Mode	 Shift + Rec / Rec Mode
 Title	 Sound / Title
 Thumbnail	 Picture / Format
 Play Mode	 Shift + Play /
 Marker	 Fav / Marker / PC
 Search	 Red / Netflix / Search

Original	Replacement
 Clear	 Exit / Cancel / Clear
 TV/VCR	 TV/Radio /
 *(Left)	 Guide / EPG / -/--
 *(Right)	 Shift + Guide / EPG / -/--
 ShowView	 Setup / OPT /

