



| Original | | Replacement | | Original | | Replacement | |
|----------|----------------|-------------|---------------|----------|---------------------|-------------|-------|
| | Power | | Power | | >> | | >> |
| | Mute | | Mute | | >> | | >> |
| | Open/Close | | Eject | | Stop | | Stop |
| | 1 | | 1 | | Play | | Play |
| | 2 | | 2 | | Pause | | Pause |
| | 3 | | 3 | | Guide | | Guide |
| | 4 | | 4 | | Rec | | Rec |
| | 5 | | 5 | | PR List | | List |
| | 6 | | 6 | | Timer Rec | | AV |
| | 7 | | 7 | | PR+ | | Ch + |
| | 8 | | 8 | | PR- | | Ch - |
| | 9 | | 9 | | Home | | Smart |
| | 0 | | 0 | | Music ID | | Dual |
| | Clear | | Shift + Clear | | Info/Display | | Info |
| | Repeat/Tv/Radi | | TV/R | | Return | | Back |
| | I<< | | I<< | | Title/PopUp | | Media |
| | << | | << | | Disc Menu/Rec. List | | Menu |



