











 














 







 






Original	Replacement	Original	Replacement
 Power	 Power	 Pause/Step	 Pause
 Open/Close	 Eject	 I<<	 I<<
 Function	 AV	 <<	 <<
 Subtitle	 Subt	 >>	 >>
 Sleep	 Sleep	 >>I	 >>I
 Info/Menu	 Info	 Speaker Level	 TV/R
 Home	 Smart	 Sound Effect	 Shift + Dual
 Disc Menu	 D. Menu	 Optical	 Options
 Back	 Back	 Vol+	 Vol +
 Title/Popup	 Menu	 Vol-	 Vol -
 Up/Presets+	 Up	 Mute	 Mute
 Down/Presets-	 Down	 Red	 Red
 Right/Tuning+	 Right	 Green	 Green
 Left/Tuning-	 Left	 Yellow	 Yellow
 Enter	 Ok	 Blue/Mono/Stereo	 Blue
 Stop	 Stop	 1	 1
 Play	 Play	 2	 2





Original		Replacement		Original		Replacement	
[3]	3	[3]	3	[+ VOL]	Vol+ Tv	[SHIFT] + [+ VOL]	Shift + Vol +
[4]	4	[4]	4	[VOL -]	Vol- Tv	[SHIFT] + [VOL -]	Shift + Vol -
[5]	5	[5]	5	[MUTE]	Mute Tv	[SHIFT] + [MUTE]	Shift + Mute
[6]	6	[6]	6				
[7]	7	[7]	7				
[8]	8	[8]	8				
[9]	9	[9]	9				
[0]	0	[0]	0				
[CLEAR]	Clear	[CLEAR EXIT]	Exit				
[REPEAT]	Repeat	[REPEAT TEXT]	Text				
[AUDIO]	Audio	[SOUND DUAL]	Dual				
[REC]	Rec	[REC MODE]	Rec				
[*]	*1	[PICTURE FORMAT]	Format				
[POWER]	Power Tv	[SHIFT] + [POWER]	Shift + Power				
[AV / INPUT]	AV Input Tv	[SHIFT] + [TIMER AV]	Shift + AV				
[PR/CH +]	PR/CH+ Tv	[+ CH]	Ch +				
[PR/CH -]	PR/CH- Tv	[CH -]	Ch -				

