



Original	Replacement
Power	Power
Eject	Eject / Surround
Tv/Radio	TV/Radio /
Media	+ Shift + Display / Media
Play	Play / Slow
Pause	Pause / Step / Freeze
<</Size	Zoom / Size
<</Size	<< / Tune-
>>/Subpage	>> / Tune+
Rec/D.Setup	Setup / OPT /
Rec/D.Setup	Rec / Rec Mode
Stop	Stop / Hold
I<</FAV	Fav / Marker / PC
I<</FAV	I<< / Preset-
>>I/Index	>>I / Preset+
Lang/Audio	Audio / Lang I/II
Hold	+ Shift + Stop / Hold

Hold

Original	Replacement
Text	Text / Goto
Subtitle	Subtitle / EQ
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
-/--	+ Shift + Guide / EPG / -/--
0	0
Recall	Back / Return
Vol+	Vol+
Mute	Mute / Dimmer
CH+	CH+ / Page+





Original	Replacement
Vol-	Vol-
CH-	CH- / Page-
Red/Goto	Shift + Text /
Red/Goto	Red / Netflix / Search
Green/Angle	Info / Angle
Green/Angle	Green / APP / Repeat
Yellow/Repeat	Shift + Green / APP /
Yellow/Repeat	Yellow / YouTube / Repeat
Blue/A-B	Shift + Yellow / YouTube /
Blue/A-B	Blue / Prime Video / Random
Menu	Menu / Home
Display	Display / Media
Title/Exit	Exit / Cancel / Clear
Title/Exit	Sound / Title
Up	Up
Left	Left
OK	OK

Original	Replacement
Right	Right
Down	Down
Source	AV / Input / RDS
EPG/D.Menu	D.Menu / Top
EPG/D.Menu	Guide / EPG / -/-

