









 


 



 




 













 


 






Original	Replacement	Original	Replacement
I<<	 I<< / Preset-		 Green / APP / Repeat
>>I	 >>I / Preset+		 Yellow / YouTube / Repeat
	 AV / Input / RDS		 Blue / Prime Video / Random
	 Power		 1
	 Display / Media		 2
	 Shift + Red / Netflix /		 3
	 Shift + Yellow / YouTube /		 4
	 Setup / OPT /		 5
	 Rec / Rec Mode		 6
	 Play / Slow		 7
	 Pause / Step / Freeze		 8
	 Stop / Hold		 9
	 Audio / Lang I/II		 TV/Radio /
	 << / Tune-		 0
	 >> / Tune+		 Zoom / Size
	 Subtitle / EQ		 Menu / Home
	 Red / Netflix / Search		 D.Menu / Top



