

 

 




 
 










 

 








Original		Replacement		Original		Replacement	
	Power		Power		Exit		Exit
	TV/SAT		Smart		Recall		Back
	Mute		Mute		Up		Up
	1		1		Down		Down
	2		2		Right		Right
	3		3		Left		Left
	4		4		OK		Ok
	5		5		Vol+		Vol +
	6		6		Vol-		Vol -
	7		7		CH&Page+		Ch +
	8		8		CH&Page-		Ch -
	9		9		Red/TTX		Red
	0		0		Green/Sub.T		Green
	SAT		Media		Yellow/Zoom		Yellow
	FAV		Pre Ch		Blue/MP		Blue
	Menu		Menu		Tv/Radio		TV/R
	EPG		Guide		Audio		Dual





Original	Replacement	Original	Replacement
 PAUSE	Pause		Pause
 POS	POS		Format
 REC	Rec		Rec
 P/N	P/N		Options
 INFO	Info		Info
 T/S	T/S		3D
	<<		<<
	>>		>>
	Play		Play
	Stop		Stop

