



Original	Replacement	Original	Replacement
	Power		Power
	Smart		Smart / List
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	Info		Info / Angle
	0		0
	Guide		Guide / EPG / -/--
	Netflix		Shift + Red / Netflix /
	YouTube		Shift + Yellow / YouTube /
	Google Play		Display / Media

Original	Replacement	Original	Replacement
	prime video		Shift + Blue / Prime
	Home		Shift + Menu /
	Up		Up
	Menu		Menu / Home
	Left		Left
	OK		OK
	Right		Right
	Back		Back / Return
	Down		Down
	Exit		Exit / Cancel / Clear
	Vol+		Vol+
	Mute		Mute / Dimmer
	CH+		CH+ / Page+
	Vol-		Vol-
	Source		AV / Input / RDS
	CH-		CH- / Page-
	Red		Red / Netflix / Search





Original		Replacement		Original	Replacement
	Green		Green / APP / Repeat		
	Yellow		Yellow / YouTube / Repeat		
	Blue		Blue / Prime Video / Random		
	<<		<< / Tune-		
	Play		Play / Slow		
	>>		>> / Tune+		
	Rec		Rec / Rec Mode		
	Pause		Pause / Step / Freeze		
	Stop		Stop / Hold		
	Text		Text / Goto		
	Subt		Subtitle / EQ		
	Audio		Audio / Lang I/II		

