



 



 



 

 



 

 



 



 











































Original		Replacement		Original		Replacement	
	Power		Power		Down		Down
	Mute		Mute / Dimmer		Exit		Exit / Cancel / Clear
	Picture		Picture / Format		1		1
	Sound		Sound / Title		2		2
	Aspect		Shift + Picture / Format		3		3
	Sleep		Sleep / Timer		4		4
	Subtitle		Subtitle / EQ		5		5
	CH. List		Smart / List		6		6
	EPG		Guide / EPG / -/--		7		7
	FAV		Fav / Marker / PC		8		8
	TV / Radio		TV/Radio /		9		9
	Up		Up		0		0
	Input		AV / Input / RDS		Recall		Back / Return
	Left		Left		Info		Info / Angle
	OK		OK		Vol +		Vol+
	Right		Right		Rec		Rec / Rec Mode
	Menu		Menu / Home		Rec. List		Display / Media





Original	Replacement	Original	Replacement
CH +	CH+ / Page+	>>I / Subpage	>>I / Preset+
Vol -	Vol-		
Play / Pause	Play / Slow		
Play / Pause	Pause / Step / Freeze		
Stop	Stop / Hold		
CH -	CH- / Page-		
Red	Red / Netflix / Search		
Green	Green / APP / Repeat		
Yellow	Yellow / YouTube / Repeat		
Blue	Blue / Prime Video / Random		
TV / TXT	Text / Goto		
Cancel	Shift + Exit / Cancel / Clear		
Reveal	Eject / Surround		
Nicam / A2	Audio / Lang I/II		
<< / Index	<< / Tune-		
>> / Hold	>> / Tune+		
I<< / Size	I<< / Preset-		

