


 
 

 

 

 
 
 






 



 

 



 
 




 

 
 


 





 

 




 

 

 

 










 


 





 



 



 
 




Original	Replacement	Original	Replacement
	Power		Power
	Mute		Mute
	TV		Shift + Red
	SP		Shift + Yellow
	REC		Shift + Green
	AUDIO		Shift + Blue
	Timer/IN-Mode		AV
	>[ ]</5/7CH		Format
	Sound		Dual
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0/AV		0
	EPG/Bass		Guide
	Media/Surr		Media
	PIP/AUX		Pre Ch
	Text		Text
	Menu		Menu
	End		Exit
	Info		Info
	Vol+		Vol +
	Vol-		Vol -
	P+		Ch +
	P-		Ch -
	Up		Up
	Down		Down
	Right		Right
	Left		Left





Original		Replacement		Original		Replacement	
	OK		Ok				
	Red/Music		Red				
	Green/Movie		Green				
	Yellow/Show		Yellow				
	Blue/Off		Blue				
	<</Tune-		<<				
	Play		Play				
	>>/Tune+		>>				
	Rec/Memory		Rec				
	Pause		Pause				
	Stop/ASP		Stop				









 



 
 
 



Original	Replacement
Power	Power
TV	Shift + Red
REC	Shift + Green
SP	Shift + Yellow
AUDIO	Shift + Blue
Timer/IN-Mode	AV
>[ ]</5/7CH	Format
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
0/AV	0

Original	Replacement
EPG/Bass	Guide
Media/Surr	Media
PIP/AUX	Pre Ch
Text	Text
Menu	Menu
End	Exit
Info	Info
P+	Ch +
P-	Ch -
Up	Up
Down	Down
Right	Right
Left	Left
OK	Ok
Red/Music	Red
Green/Movie	Green
Yellow/Show	Yellow





 
 


 



 



 

 





 


 


 
 


 
 
 


 


 

 

 
 

 
 
 
 







 




 





Original	Replacement	Original	Replacement
 Blue/Off	 Blue		
 <</Tune-	 <<		
 Play	 Play		
 >>/Tune+	 >>		
 Rec/Memory	 Rec		
 Pause	 Pause		
 Stop/ASP	 Stop		





 



 

 

 




 
 
 

 



 

 

 

 

 


















 




 

 


 

 

 
 




Original	Replacement	Original	Replacement
 Power	 Power	 EPG/Bass (3)	 6
 TV	 Shift + Red	 PIP/AUX (1)	 Pre Ch
 REC	 Shift + Green	 PIP/AUX (2)	 Shift + 1
 SP	 Shift + Yellow	 PIP/AUX (3)	 Shift + 2
 AUDIO	 Shift + Blue	 PIP/AUX (4)	 Shift + 3
 Mute	 Mute	 PIP/AUX (5)	 Shift + 4
 Timer/IN-Mode	 AV	 PIP/AUX (6)	 Shift + 5
 >[ ]</5/7/CH (1)	 Format	 PIP/AUX (7)	 Shift + 6
 Sound	 Dual	 Text	 Text
 EPG/Bass (1)	 Guide	 Menu	 Menu
 Media/Surr	 Media	 End	 Exit
 Sound1	 1	 Info	 Info
 Sound2	 2	 OK	 Ok
 Sound3	 3	 Up	 Up
 Sound4	 4	 Down	 Down
 >[ ]</5/7/CH (2)	 Shift + Format	 Right	 Right
 EPG/Bass (2)	 5	 Left	 Left







Original	Replacement
 Power	 Power
 TV	 Shift + Red
 REC	 Shift + Green
 SP	 Shift + Yellow
 AUDIO	 Shift + Blue
 Timer/IN-Mode	 AV
 >[ ]</5/7/CH	 Format
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0/AV	 0

Original	Replacement
 EPG/Bass	 Guide
 Media/Surr	 Media
 PIP/AUX	 Pre Ch
 Text	 Text
 Menu	 Menu
 End	 Exit
 Info	 Info
 P+	 Ch +
 P-	 Ch -
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left
 OK	 Ok
 Red/Music	 Red
 Green/Movie	 Green
 Yellow/Show	 Yellow



