 

 



 

 



 

 





 

 














 
 



 
 
 

 





 





 



 
 
 




 



 
 
 
 
 

 

 



 

 

 

 
 
 


 
 
 
 
 




Original	Replacement	Original	Replacement
	Power		Power
	Mute		Mute / Dimmer
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	List		Smart / List
	0		0
	Recall		Back / Return
	Vol+		Vol+
	Sleep		Sleep / Timer
	CH+		CH+ / Page+
	Vol-		Vol-
	Prog		Shift + TV/Radio / Program
	CH-		CH- / Page-
	Aspect		Shift + Picture / Format
	S.Mode		Sound / Title
	P.Mode		Picture / Format
	Guide/Title		Guide / EPG / -/-
	Guide/Title		Shift + Sound / Title
	Menu		Menu / Home
	Up		Up
	Input		AV / Input / RDS
	Left		Left
	OK		OK
	Right		Right
	Freeze		Shift + Pause / Step /
	Down		Down
	Exit		Exit / Cancel / Clear





Original	Replacement
	 Info / Angle
	 Fav / Marker / PC
	 Setup / OPT /
	 Shift + Info / Angle
	 TV/Radio /
	 Audio / Lang I/II
	 Text / Goto
	 D.Menu / Top
	 Shift + Up
	 Display / Media
	 Zoom / Size
	 Rec / Rec Mode
	 Shift + Left
	 Shift + Exit / Cancel / Clear
	 Shift + OK
	 Shift + Right
	 Shift + Zoom / Size

Original	Replacement
	 Stop / Hold
	 Eject / Surround
	 Shift + Down
	 Play / Slow
	 Pause / Step / Freeze
	 I<< / Preset-
	 Shift + Stop /
	 >>I / Preset+
	 << / Tune-
	 >> / Tune+
	 Shift + Text /
	 Red / Netflix / Search
	 Green / APP / Repeat
	 Shift + Play /
	 Shift + Green / APP /
	 Yellow / YouTube / Repeat
	 Shift + Yellow / YouTube / Repeat



