


 

 

 



 






Original	Replacement
Power	Power
PP	Pre Ch
Mute	Mute
I-II	Dual
P<P	Back
-/--	Guide
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
0	0
Vol+	Vol +

Original	Replacement
Vol-	Vol -
Up	Up
Down	Down
Right	Right
Left	Left
M	Ok
PR+	Ch +
PR-	Ch -
M	Menu
Red/Sound	Red
Green/Picture	Green
Yellow/Feature	Yellow
Blue/Install	Blue
TV	TV/R
AV	AV
[≡]	Text
[≡o]	Smart





	Original	Replacement		Original	Replacement
	[≡+]	 Subt			
	[≡x]	 Options			
	[.:≡]	 Media			
	[≡?]	 Format			
	[≡i]	 List			
	[≡◆]	 3D			
	[i]/Info	 Info			

