 



 


 




 
 

 
 
 
 
 


 
 

 

 



 



 



 


 


 
 
 
 



 




 
 

 









Original		Replacement		Original		Replacement	
	On/Standby		Power		CH-		Ch -
	Sleep		Sleep		Mute		Mute
	CBL/SAT		1		Vol+		Vol +
	DVD		2		Vol-		Vol -
	Blu-ray		3		Info		Info
	Game		4		Option		Options
	AUX		AV		Up		Up
	Media Player		5		Down		Down
	TV Audio		TV/R		Right		Right
	CD		6		Left		Left
	Tuner		7		OK		Ok
	iPod/USB		8		Back		Back
	Phono		9		Setup		Menu
	M-XPort		Guide		>>I/Tune+		>>I
	Network		0		I<</Tune-		I<<
	Internet Radio		Pre Ch		Play		Play
	CH+		Ch +		Pause		Pause



 



 



 
 

 
 
 
 


 


 
 
 
 


 

 
 





 
 

 
 



	Original	Replacement	
	Favorite Station 1	 LIST	List
	Favorite Station 2	 DUAL	Dual
	Favorite Station 3	 SUBT	Subt
	Red/Movie	 A	Red
	Green/Music	 B	Green
	Blue/Game	 D	Blue
	Yellow/Pure	 C	Yellow

	Original	Replacement





Original		Replacement		Original		Replacement	
	On/Standby		Power		CH-		Ch -
	Sleep		Sleep		Mute		Mute
	CBL/SAT		1		Vol+		Vol +
	DVD		2		Vol-		Vol -
	Blu-ray		3		Option		Options
	Game		4		Up		Up
	AUX		AV		Down		Down
	Media Player		5		Right		Right
	TV Audio		TV/R		Left		Left
	CD		6		Enter		Ok
	Tuner		7		Back		Back
	iPod/USB		8		>>I/Tune+		>>I
	Phono		9		I<</Tune-		I<<
	M-XPort		Guide		Play		Play
	Network		0		Pause		Pause
	Internet Radio		Pre Ch		Favorite Station 1		List
	CH+		Ch +		Favorite Station 2		Dual





Original	Replacement	Original	Replacement
			

