







 



 







 


 
 



 



 









 







 

 



 















Original		Replacement		Original		Replacement	
	Power		Power		Menu		Menu / Home
	<<		<< / Tune-		9		9
	>>		>> / Tune+		0/AV		AV / Input / RDS
	Stop		Stop / Hold		0/AV		0
	Wide		Picture / Format		i		Info / Angle
	Red		Red / Netflix / Search		Up		Up
	Green		Green / APP / Repeat		Cancel		Shift + Exit / Cancel / Clear
	Yellow/><		Yellow / YouTube / Repeat		Left		Left
	Blue		Blue / Prime Video / Random		Right		Right
	1		1		Exit		Exit / Cancel / Clear
	2		2		Down		Down
	3		3		OK		OK
	4		4		Play		Play / Slow
	5		5		Pause		Pause / Step / Freeze
	6		6		Lang(AD)		Audio / Lang I/II
	7		7		Subt.		Subtitle / EQ
	8		8		FAV		Fav / Marker / PC





	Original	Replacement		Original	Replacement
	Tv/Radio	TV/Radio /			
	P+	CH+ / Page+			
	Vol+	VOL+			
	Guide	Guide / EPG / -/--			
	Mute	Mute / Dimmer			
	Text	Text / Goto			
	P-	CH- / Page-			
	Vol-	VOL-			

