



Original	Replacement
Power	Power
Mute	Mute / Dimmer
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
--	Shift + Guide / EPG / -/-
0	0
Back	Back / Return
Text	Text / Goto
Subtitle	Subtitle / EQ
Format	Picture / Format

Original	Replacement
Fav	Fav / Marker / PC
Vol+	Vol+
Page+	Shift + CH+ /
CH+	CH+ / Page+
Vol-	Vol-
Page-	Shift + CH- /
CH-	CH- / Page-
Lang	Audio / Lang I/II
TV/Rad	TV/Radio /
Info	Info / Angle
EPG	Guide / EPG / -/-
Up	Up
Left	Left
OK	OK
Right	Right
Menu	Menu / Home
Down	Down





Original	Replacement	Original	Replacement
 Exit	 Exit / Cancel / Clear		
 Red	 Red / Netflix / Search		
 Green	 Green / APP / Repeat		
 Yellow	 Yellow / YouTube / Repeat		
 Blue / SOS	 Blue / Prime Video / Random		
 Timer	 Sleep / Timer		
 Eject	 Eject / Surround		
 List	 Smart / List		
 >	 Shift + Pause / Step /		
 ▶	 Play / Slow		
	 Pause / Step / Freeze		
 ■	 Stop / Hold		
 ●	 Rec / Rec Mode		
 ◀◀	 ◀◀ / Tune-		
 ▶▶	 ▶▶ / Tune+		
 ◀◀◀	 ◀◀◀ / Preset-		
 ▶▶▶	 ▶▶▶ / Preset+		

Original	Replacement

