





































 
 



 


 




















 




Original		Replacement		Original		Replacement	
	Standby		Power		8		8
	Auto / Eject		Eject / Surround		9		9
	Mute		Mute / Dimmer		Input		AV / Input / RDS
	P.Mode		Picture / Format		0		0
	S.Mode		Sound / Title		Recall		Back / Return
	Info		Info / Angle		Sleep		Sleep / Timer
	Nicam		Audio / Lang I/II		Up		Up
	1		1		Left		Left
	2		2		Enter		OK
	3		3		Right		Right
	Menu		Menu / Home		Down		Down
	4		4		CH-		CH- / Page-
	5		5		CH+		CH+ / Page+
	6		6		Vol-		Vol-
	Exit / D.Setup		Setup / OPT /		Vol+		Vol+
	Exit / D.Setup		Exit / Cancel / Clear		Text / Slow		Text / Goto
	7		7		Text / Slow		Shift + Play / Slow





Original	Replacement
Hold / Play/Pause	Play / Slow
Hold / Play/Pause	+  Shift + Stop /
Hold / Play/Pause	Pause / Step / Freeze
Page+ / Stop	Stop / Hold
Page+ / Stop	+  Shift + CH+ /
Page- / Zoom	Zoom / Size
Page- / Zoom	+  Shift + CH- /
[≡i] / I<<	I<< / Preset-
[≡□] / >>I	>>I / Preset+
[≡?] / <<<	<<< / Tune-
[≡●] / >>>	>>> / Tune+
EPG / D.Menu	D.Menu / Top
EPG / D.Menu	Guide / EPG / -/--
FAV / D.Title	+  Shift + Sound / Title
FAV / D.Title	Fav / Marker / PC
FAV- / D.Disp	Display / Media
FAV- / D.Disp	+  Shift + Down

Original	Replacement
FAV+ / Goto	+  Shift + Up
FAV+ / Goto	+  Shift + Text /
Red / D.Prog	TV/Radio /
Red / D.Prog	Red / Netflix / Search
Green / Step	+  Shift + Pause / Step /
Green / Step	Green / APP / Repeat
Yellow / RPT	+  Shift + Green / APP /
Yellow / RPT	Yellow / YouTube / Repeat
Blue / A-B	+  Shift + Yellow / YouTube /
Blue / A-B	Blue / Prime Video / Random
List / Angle	+  Shift + Info / Angle
List / Angle	Smart / List
SUB-T	Subtitle / EQ
Aspect	+  Shift + Picture / Format
Rec	Rec / Rec Mode

