











 



 
 
 

 

 
 
 

 
















Original	Replacement	Original	Replacement
 Power	 Power	 TV/AV	 AV / Input / RDS
 Open/Close	 Eject / Surround	 P+	 CH+ / Page+
 Scan	 Display / Media	 TV/DVD	 Smart / List
 Swap	 Back / Return	 V-	 Vol-
 Call	 Shift + OK	 Menu	 Menu / Home
 Mute	 Mute / Dimmer	 V+	 Vol+
 1	 1	 Exit	 Exit / Cancel / Clear
 2	 2	 P-	 CH- / Page-
 3	 3	 P.STD	 Picture / Format
 4	 4	 Red/Picture	 Shift + Picture / Format
 5	 5	 Red/Picture	 Red / Netflix / Search
 6	 6	 Green/Sound	 Sound / Title
 7	 7	 Green/Sound	 Green / APP / Repeat
 8	 8	 Yellow/Time	 Yellow / YouTube / Repeat
 9	 9	 Blue/Function	 Blue / Prime Video / Random
 0	 0	 <<	 << / Tune-
 -/--	 Guide / EPG / -/--	 >>	 >> / Tune+






 









 



Original		Replacement	
PREV	<<	PRESET-	<< / Preset-
NEXT	>>	PRESET+	>>  / Preset+
TUNE	Tune	SHIFT + PROGRAM TV/RADIO	Shift + TV/Radio / Program
Up	Up	Up	Up
Down	Down	Down	Down
PROGRAM	Program	PROGRAM TV/RADIO	TV/Radio /
ZOOM	Zoom	SIZE ZOOM	Zoom / Size
D.CALL	D.Call	ANGLE INFO	Info / Angle
[◆]	[◆]	SHIFT + SIZE ZOOM	Shift + Zoom /
[-]	[-]	TOP MENU D.MENU	D.Menu / Top
[/=]	[/=]	SHIFT + GOTO TEXT	Shift + Text /
[=]	[=]	GOTO TEXT	Text / Goto
[X]	[X]	SHIFT + CLEAR EXIT	Shift + Exit / Cancel / Clear
[?]	[?]	OPT-TOOLS SETUP	Setup / OPT /
[+]	[+]	EQ SUBTITLE	Subtitle / EQ
Timer	Timer	TIMER SLEEP	Sleep / Timer
>	>	Right	Right

Original		Replacement	







 





 
 
 



 

 
 
 
 
 

 







 
 


Original	Replacement
 Power	 Power
 Open / Close	 Eject / Surround
 Scan	 Shift + Setup / OPT / Tools
 Swap	 Back / Return
 Call	 Smart / List
 Mute	 Mute / Dimmer
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 -/--	 Guide / EPG / -/--

Original	Replacement
 TV/AV	 AV / Input / RDS
 I-II	 Shift + Audio / Lang I/II
 P+	 CH+ / Page+
 TV/DVD	 Shift + 2
 TV/DVD	 Shift + 1
 V-	 Vol-
 Menu	 Menu / Home
 V+	 Vol+
 Exit	 Exit / Cancel / Clear
 P-	 CH- / Page-
 P.Std	 Picture / Format
 Red / Picture	 Red / Netflix / Search
 Red / Picture	 Shift + Picture / Format
 Green / Sound	 Green / APP / Repeat
 Green / Sound	 Shift + Sound / Title
 Yellow / Time	 Yellow / YouTube / Repeat
 Yellow / Time	 Sleep / Timer










Original	Replacement
 Blue / Function	 Blue / Prime Video / Random
 Rev	 << / Tune-
 Fwd	 >> / Tune+
 I<<	 I<< / Preset-
 >>I	 >>I / Preset+
 Stop	 Stop / Hold
 Setup	 Setup / OPT /
 Pause / Step	 Pause / Step / Freeze
 White / Tune	 Display / Media
 D.Menu	 D.Menu / Top
 Up	 Up
 Repeat	 Shift + Green / APP / Repeat
 A-B	 Shift + Yellow / YouTube / Repeat A-B
 Left	 Left
 Play / Enter	 Play / Slow
 Play / Enter	 OK
 Right	 Right

Original	Replacement
 Slow	 Shift + Play /
 Angle	 Info / Angle
 Down	 Down
 Title / PBC	 Sound / Title
 Search	 Shift + Red / Netflix /
 Audio	 Audio / Lang I/II
 Program	 TV/Radio /
 Zoom	 Zoom / Size
 D.Call	 Shift + Smart / List
 10+	 Shift + Guide / EPG / -/-
 Caption	 Subtitle / EQ
 Hold	 Shift + Stop /
 [-]	 Shift + TV/Radio / Program
 Mix	 Shift + Text /
 Text	 Text / Goto
 [X]	 Shift + Exit / Cancel / Clear
 Reveal	 Shift + Sleep / Timer





	Original	Replacement		Original	Replacement
	Size	 + 	Shift + Zoom /		
	Subcode	 + 	Shift + Subtitle / EQ		
	>	 + 	Shift + Eject / Surround		

