



Original	Replacement	Original	Replacement
	Power		Power
	Mute		Mute / Dimmer
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	DTV / ATV		D.Menu / Top
	0		0
	Recall		Back / Return
	P.Mode		Picture / Format
	S.Mode		Sound / Title
	Sleep		Sleep / Timer
	Vol +		Vol+
	MTS		Audio / Lang I/II
	CH +		CH+ / Page+
	Vol -		Vol-
	REC List		Smart / List
	CH -		CH- / Page-
	FAV List		Fav / Marker / PC
	REC		Rec / Rec Mode
	Freeze		Pause / Step / Freeze
	Menu		Menu / Home
	Up		Up
	Source		AV / Input / RDS
	Left		Left
	Enter		OK
	Right		Right
	Exit		Exit / Cancel / Clear
	Down		Down





Original		Replacement	
DISP	Display	MEDIA DISP	Display / Media
[Red]	Red	NETFLIX SEARCH	Red / Netflix / Search
[Green]	Green	APP REPEAT	Green / APP / Repeat
[Yellow]	Yellow	YouTube REPEAT A-B	Yellow / YouTube / Repeat
[Blue]	Blue	Prime Video RANDOM	Blue / Prime Video / Random
GUIDE [Left]	<< / Guide	TUNE- [Left]	<< / Tune-
GUIDE [Left]	<< / Guide	GUIDE EPG	Guide / EPG / -/-
TIMESHIFT [Right]	Play/Pause / Timeshift	SLOW [Right]	Play / Slow
ASPECT [Right]	>> / Aspect	TUNE+ [Right]	>> / Tune+
CANCEL [Left]	I<< / Cancel	PRESET- [Left]	I<< / Preset-
SUB.PG [Right]	>>I / Subpage	PRESET+ [Right]	>>I / Preset+
INDEX [Square]	Stop / Index	ANGLE INFO	Info / Angle
INDEX [Square]	Stop / Index	HOLD [Square]	Stop / Hold
TV/RADIO [Square]	TV / Radio	PROGRAM TV/RADIO	TV/Radio /
SUBTITLE [Square]	Subtitle	EQ SUBTITLE	Subtitle / EQ
REVEAL [Square]	Reveal	OPT-TOOLS SETUP	Setup / OPT /
SIZE [Square]	Size	SIZE ZOOM	Zoom / Size

Original		Replacement	
HOLD [Square]	Hold	SHIFT + HOLD	Shift + Stop /
TEXT [Square]	Text	GOTO TEXT	Text / Goto

