


 





 

 





 

 

 

 

 


 
 




Original		Replacement		Original		Replacement	
	Power		Power		Ch-		Down
	Mute		Mute		Vol+		Vol +
	1		1		Vol+		Right
	2		2		Vol-		Vol -
	3		3		Vol-		Left
	4		4		OK		Ok
	5		5		Red/EPG		Red
	6		6		Red/EPG		Guide
	7		7		Yellow/Subtitle		Yellow
	8		8		Yellow/Subtitle		Subt
	9		9		Blue/TTX		Text
	0		0		Blue/TTX		Blue
	Menu		Menu		Green/Audio		Green
	Exit		Exit		Green/Audio		Dual
	Ch+		Ch +		i		Info
	Ch+		Up		FAV		Pre Ch
	Ch-		Ch -		TV/Radio		TV/R





Original		Replacement		Original	Replacement
	Video		Format		
	Prog		Sleep		
	File		Media		
	Device		Smart		
	REC		Rec		
	Zoom		Eject		
	Stop		Stop		
	Prev		I<<		
	Next		>>I		
	Play/Pause		Play		
	Play/Pause		Pause		
	<<		<<		
	>>		>>		

