 

 

 


 
 

 

 

 



 

 









 



 

 




 

























 











 



Original	Replacement
 Power	 Power
 Off Timer	 Sleep / Timer
 Input Tv	 Shift + AV / Input / RDS
 Input AV	 AV / Input / RDS
 Menu	 Menu / Home
 [+]/Aspect	 Picture / Format
 N	 D.Menu / Top
 OO/Surround	 Eject / Surround
 i	 Info / Angle
 X/Exit	 Exit / Cancel / Clear
 Viera Tools	 Display / Media
 Internet	 Smart / List
 Up	 Up
 Guide	 Guide / EPG / -/-
 Left	 Left
 OK	 OK
 Right	 Right

Original	Replacement
 Option	 Setup / OPT /
 Down	 Down
 Return/Back	 Back / Return
 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat
 Blue	 Blue / Prime Video / Random
 [≡]/Text	 Text / Goto
 [≡◆]/STTL	 Subtitle / EQ
 [≡i]/Index	 Sound / Title
 [≡+]/Hold	 Shift + Stop /
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6





Original	Replacement	Original	Replacement
 7	 7	 Pause/Step	 Pause / Step / Freeze
 8	 8	 Rec	 Rec / Rec Mode
 9	 9		
 Mute	 Mute / Dimmer		
 0	 0		
 Last View	 Fav / Marker / PC		
 Vol+	 Vol+		
 PR+	 CH+ / Page+		
 Vol-	 Vol-		
 PR-	 CH- / Page-		
 Power Down	 Shift + Power		
 Programme ▼	 Shift + CH- /		
 Programme ▲	 Shift + CH+ /		
 <</ <<	 << / Tune-		
 Play	 Play / Slow		
 >>/>>	 >> / Tune+		
 Stop	 Stop / Hold		

Original	Replacement	Original	Replacement
 Pause/Step	 Pause / Step / Freeze		
 Rec	 Rec / Rec Mode		

