

 

 
 

 
 





 



 


 



 








Original	Replacement	Original	Replacement
	Power		Power
	3D		3D
	Tv Input		TV/R
	AV Input		AV
	Menu		Menu
	[+]/Aspect		Format
	N		D. Menu
	(<>)/Surround		Dual
	i		Info
	X/Exit		Exit
	Internet		Smart
	Viera Tools		Media
	Guide		Guide
	Option		Options
	Return/Back		Back
	Up		Up
	Down		Down

Original	Replacement	Original	Replacement
	Right		Right
	Left		Left
	OK		Ok
	Red		Red
	Green		Green
	Yellow		Yellow
	Blue		Blue
	[≡]/Text		Text
	[≡♦]/STTL		Subt
	[≡i]/Index		List
	[≡+]/Hold		Sleep
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6





Original		Replacement	
	7		7
	8		8
	9		9
	0		0
	Last View		Pre Ch
	Vol+		Vol +
	Vol-		Vol -
	Mute		Mute
	CH+		Ch +
	CH-		Ch -
	Second Power		Shift + Power
	Programme Up		Shift + Ch +
	Programme		Shift + Ch -
	<</ <<		<<
	Play		Play
	>>/>>		>>
	Stop		Stop

Original		Replacement	
	Pause/Step		Pause
	Rec		Rec

