



Original	Replacement
 POWER	 Power
 TV	 TV/R
 VCR / AUX	 Shift + TV/R
 SLEEP	 Sleep
 TV / AV	 AV
 TUNER / BAND	 Smart
 DVD / CD	 Media
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0

Original	Replacement
 $\cong 10 / -/--$	 Guide
 Cancel	 Exit
 CH +	 Ch +
 CH -	 Ch -
 VOL +	 Vol +
 VOL -	 Vol -
 SKIP PREV.	 I<<
 SKIP NEXT	 >>I
 SLOW/SEARCH	 <<
 SLOW/SEARCH	 >>
 STOP	 Stop
 PAUSE	 Pause
 PLAY	 Play
 TOP MENU / DIR. NAV.	 D. Menu
 MENU / PLAY LIST	 Menu
 UP	 Up
 LEFT	 Left





Original	Replacement
ENTER	Ok
RIGHT	Right
DOWN	Down
DISPLAY / TV VOL-	Info
DISPLAY / TV VOL-	Shift + Vol -
RETURN / TV	Shift + Vol +
RETURN / TV	Back
SUBWOOFER	3D
SFC	Green
C. FOCUS	Shift + 1
SUPER SRND.	Format
DOLBY PL. II	Dual
Mix 2CH	Shift + Subt
C. S. M.	Red
POSITION	Pre Ch
AUDIO	Shift + Dual
ZOOM	Eject

Original	Replacement
SETUP	Options
MUTING	Mute
FL DISPLAY	Shift + Info
PAGE	Shift + 2
GROUP	Shift + 3
REPEAT	Text
PLAY MODE	Shift + Play
TEST	Yellow
CH. SELECT	List
QUICK REPLAY	Blue
SUBTITLE	Subt












 
 

 





 

 


 



 


 
 





 





Original	Replacement
Power	Power
Power AV	+ Shift + Power
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
0	0
≥10 / -/-	GUIDE Guide
TV/AV	TIMER AV AV
CH+	+ CH Ch +
CH-	CH - Ch -
Tv Vol+	+ VOL Vol +

Original	Replacement
Tv Vol-	Vol -





Original	Replacement
	 Power
	 +  Shift + Power
	 1
	 2
	 3
	 4
	 5
	 6
	 7
	 8
	 9
	 0
	 Guide
	 >>
	 <<
	 <<
	 >>

Original	Replacement
	 Pause
	 Play
	 Stop

