 


Original	Replacement
Power DVD	Power
Rec Check	Rec
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
0	0
-/-	Guide
CH+ / Tracking/V-Lock +	Ch +
CH- / Tracking/V-Lock -	Ch -
AV / Input Select	AV
Output DVD	Media

Original	Replacement
<< Slow/Search	<<
Slow/Search >>	>>
Stop	Stop
Pause / Step	Pause
Play	Play
Top Menu	D. Menu
Menu	Menu
Up	Up
Left	Left
Enter	Ok
Right	Right
Down	Down
Display	Info
Return	Back
Timer	Shift + AV
Play Mode	Shift + Play
Position	Pre Ch

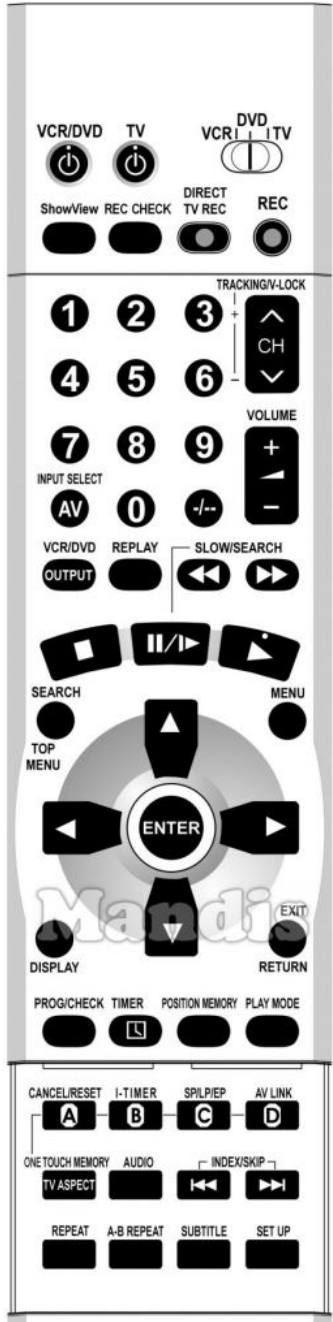



 








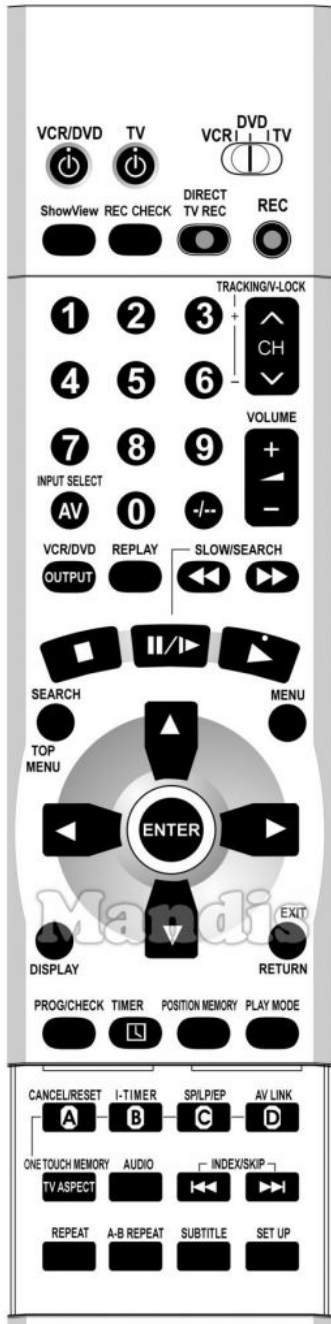



 

 







 

 

 




Memory





 

 



 























Original	Replacement	Original	Replacement
Replay	List		
A / Cancel/Reset	Red		
B / I-Timer	Green		
C / SP/LP/EP	Yellow		
D / AV Link	Blue		
One Touch	Smart		
Audio	Dual		
I<< Index/Skip	I<<		
Index/Skip >>I	>>I		
Repeat	Text		
A-B Repeat	+  Text		
Subtitle	Subt		
Setup	Options		

 




Original	Replacement
 Power VCR	 Power
 ShowView	 Smart
 Rec Check	 Options
 Direct TV Rec	 Shift + Rec
 Rec	 Rec
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 -/-	 Guide
 CH+ / Tracking/V-Lock +	 Ch +

Original	Replacement
 CH- / Tracking/V-Lock -	 Ch -
 AV / Input Select	 AV
 Output VCR	 Media
 Replay	 List
 << Slow/Search	 <<
 Slow/Search >>	 >>
 Stop	 Stop
 Pause / Step	 Pause
 Play	 Play
 Menu	 Menu
 Up	 Up
 Left	 Left
 Enter	 Ok
 Right	 Right
 Down	 Down
 Display	 Info
 Exit	 Exit



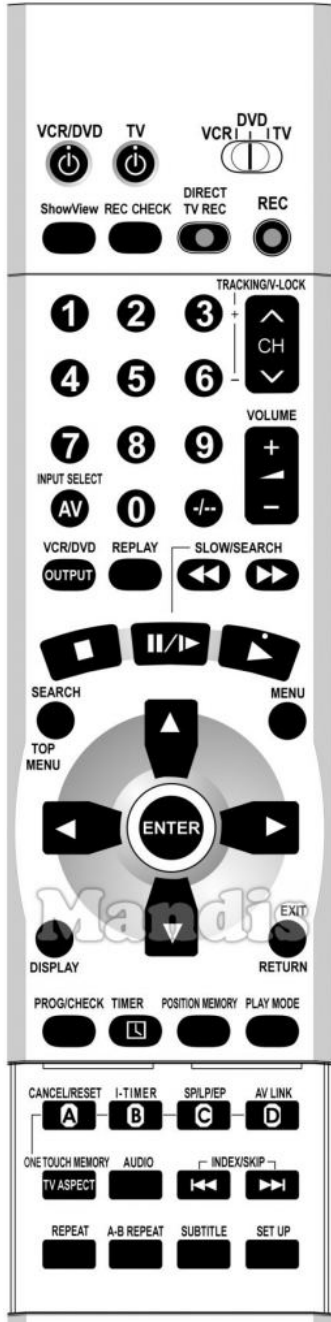

Original	Replacement	Original	Replacement
 Prog / Check	 Sleep		
 Audio	 Dual		
 I<< Index	 I<<		
 Index >>I	 >>I		

