



 

 
 


 

 
 

Original	Replacement
Power	Power
HDD	Shift + Media
DVD	Media
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
0	0
-/--	Guide
Cancel	Exit
AV	AV
Input Select	Eject

Original	Replacement
Direct Tv Rec	TV/R
ShowView	3D
CH+	Ch +
CH-	Ch -
Vol+	Vol +
Vol-	Vol -
I<< Skip	I<<
Skip >>I	>>I
<< Slow/Search	<<
Slow/Search >>	>>
Pause	Pause
Stop	Stop
Play	Play
Menu / Play List	Menu
Top Menu / Direct Navigator	D. Menu
Functions	Options
Return	Back





Original	Replacement
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left
 Enter	 Ok
 Rec	 Rec
 Frame II >	 Shift + Right
 < Frame	 Shift + Left
 Manual Skip	 Format
 Erase	 Text
 Time Slip	 Smart
 Prog/Check	 Sleep
 Timer	 Shift + AV
 Marker	 Pre Ch
 Dubbing	 Subt
 Status	 List
 Rec Mode	 Shift + Rec

Original	Replacement
 A/Display	 Red
 A/Display	 Info
 B/Position	 Green
 C/Audio	 Yellow
 C/Audio	 Dual
 D/AV Link	 Blue





Original	Replacement
Power	Power
CH+	Ch +
CH-	Ch -
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
0	0
-/--	Guide
A	Red
B	Green
C	Yellow

Original	Replacement
D	Blue

