



Original	Replacement
Power	Power
Power Tv	+ Shift + Power
CH+ Tv	+ Shift + CH+ /
Volume+ Tv	Vol+
Direct Tv Rec	+ Shift + TV/Radio / Program
AV Tv	+ Shift + AV / Input / RDS
CH- Tv	+ Shift + CH- /
Volume- Tv	Vol-
1	1
2	2
3	3
CH+	CH+ / Page+
4	4
5	5
6	6
CH-	CH- / Page-
7	7

Original	Replacement
8	8
9	9
ShowView	Zoom / Size
Cancel	Exit / Cancel / Clear
0	0
Input Select	AV / Input / RDS
Manual Skip	+ Shift + Display / Media
I<< Skip	I<< / Preset-
Skip >>I	>>I / Preset+
<< Slow/Search	<< / Tune-
Slow/Search >>	>> / Tune+
Stop	Stop / Hold
Pause	Pause / Step / Freeze
Play	Play / Slow
Direct Navigator/Top	D.Menu / Top
Up	Up
Functions	Setup / OPT /



