



































Original	Replacement	Original	Replacement
On/Off	 Power	Syst.	 D.Menu / Top
Audio Out	 Mute / Dimmer	Vps/Pdc	 Setup / OPT /
Play	 Play / Slow	Store	 Text / Goto
Pause	 Pause / Step / Freeze	Input Source	 AV / Input / RDS
Stop	 Stop / Hold	Menu	 Menu / Home
Record	 Rec / Rec Mode	Menu Up	 Up
Rewind	 << / Tune-	VCR/TV	 Info / Angle
F.Forward	 >> / Tune+	Menu Left	 Left
Prev.	 I<< / Preset-	OK Enter	 OK
Next	 >>I / Preset+	Menu Right	 Right
Audio Dub	 Audio / Lang I/II	Clear 00:00	 Exit / Cancel / Clear
Auto/Track	 Subtitle / EQ	Menu Down	 Down
Eject/Reverse	 Eject / Surround	Show View	 Smart / List
F.Adv	 Picture / Format	Slow/Dpss+	 CH+ / Page+
Sp/Lp/Speed	 Zoom / Size	Display	 Display / Media
Encode	 Sleep / Timer	Slow/Dpss-	 CH- / Page-
Progr/C/CH	 TV/Radio /	1	 1



Program

