



| Original | Replacement | Original | Replacement |
|--|--|--|---|
|  Power |  Power |  Mouse |  Shift + Media |
|  Mute |  Mute |  www |  Media |
|  1 |  1 |  Back |  Back |
|  2 |  2 |  Up |  Up |
|  3 |  3 |  Left |  Left |
|  4 |  4 |  OK |  Ok |
|  5 |  5 |  Right |  Right |
|  6 |  6 |  Down |  Down |
|  7 |  7 |  Vol+ |  Vol + |
|  8 |  8 |  Vol- |  Vol - |
|  9 |  9 |  Smart TV |  Smart |
|  0 |  0 |  Home |  Shift + Smart |
|  Radio |  TV/R |  Refresh |  D. Menu |
|  Time Shift |  3D |  CH+ |  Ch + |
|  Sleep |  Sleep |  CH- |  Ch - |
|  Rec |  Rec |  Red / << |  Red |
|  Fav |  Shift + Pre Ch |  Red / << |  << |





| Original | Replacement | Original | Replacement |
|-------------------|--------------|----------|--------------|
| Green / >> | Green | Info | Info |
| Green / >> | >> | ≡ | Options |
| Yellow / I<< | Yellow | Menu | Menu |
| Yellow / I<< | I<< | Pre-CH | Pre Ch |
| Blue / >>I | Blue | Audio | Shift + Dual |
| Blue / >>I | >>I | EPG | Guide |
| Text / Play/Pause | Text | Source | AV |
| Text / Play/Pause | Play | Exit | Exit |
| Text / Play/Pause | Pause | | |
| Stop / Cancel | Stop | | |
| Reveal | Shift + Text | | |
| Size | Eject | | |
| PVR List / Index | Shift + List | | |
| Subtitle | Subt | | |
| S.Mode | Dual | | |
| List | List | | |
| P.Mode | Format | | |

| Original | Replacement | Original | Replacement |
|----------|-------------|----------|--------------|
| Info | Info | Info | Info |
| ≡ | Options | Menu | Menu |
| Pre-CH | Pre Ch | Audio | Shift + Dual |
| EPG | Guide | Source | AV |
| Exit | Exit | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |

