


Original	Replacement
STANDBY/ON	Power
SLEEP	Sleep / Timer
DIMMER	Shift + Mute / Dimmer
DISPLAY	Display / Media
1 LINE 1/DVD	1
2 LINE 2	2
3 CD	3
TUNING UP	CH+ / Page+
4 TAPE 1	4
5 TAPE 2	5
6 PHONO	6
TUNING DOWN	CH- / Page-
7 FM	7
8 AM	8
9	9
PRESET UP	Shift + >>I / Preset+
CLR	Exit / Cancel / Clear

Original	Replacement
0	0
DIRECT TUNING	D.Menu / Top
PRESET DOWN	Shift + I<< / Preset-
HDD PLAY LIST	Shift + Down
HDD PLAYLIST	Shift + Up
HDD ALBUM	Down
HDD ALBUM UP	Up
I<<	I<< / Preset-
>>I	>>I / Preset+
<<	<< / Tune-
>>	>> / Tune+
PAUSE	Pause / Step / Freeze
PLAY < DECK A/HDD DOCK	Shift + << /
STOP DECK A/HDD DOCK	Rec / Rec Mode
PLAY > DECK A/HDD DOCK	Play / Slow
PLAY < DECK B	Sound / Title
STOP DECK B	Stop / Hold

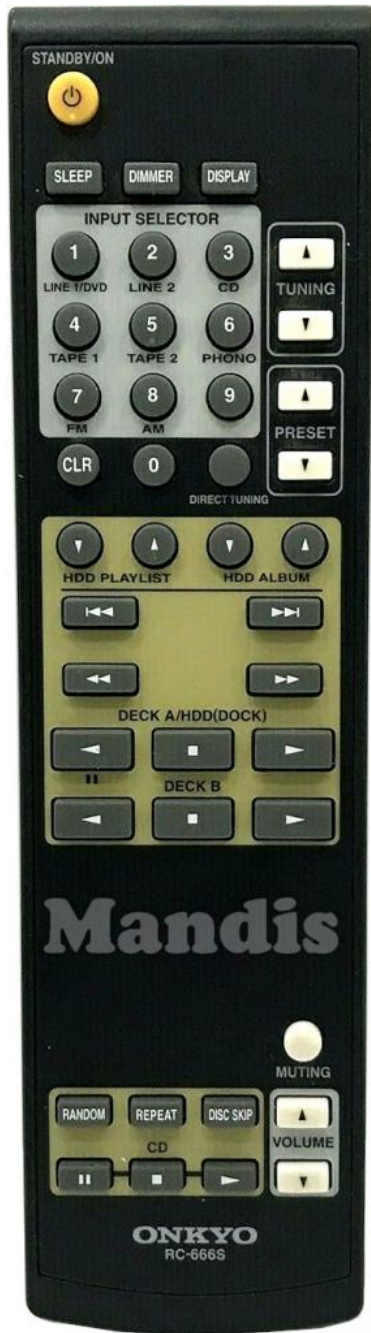



Original	Replacement	Original	Replacement
PLAY > DECK B	+ Shift + >> /		
MUTING	Mute / Dimmer		
RANDOM	Blue / Prime Video / Random		
REPEAT	Green / APP / Repeat		
DISC SKIP	Back / Return		
VOL+	Vol+		
CD PAUSE	+ Shift + Pause / Step /		
CD STOP	+ Shift + Stop /		
CD PLAY	+ Shift + Play /		
VOL-	Vol-		

Original	Replacement

