 

 

 














 







 









 
 


 



 

 
 
 

 
 



 



 

 

 


 




 


 
 






 











 



 



 



 





 

 

 

 

 


 
 

 





 


 



Original	Replacement	Original	Replacement
 RCVR On	 Power	 RCVR Down	 Down
 RCVR Standby	 Shift + Power	 RCVR Angle / Level Down	 Format
 RCVR Return	 Back	 RCVR Subtitle / Level Up	 Subt
 RCVR Setup	 Options	 RCVR I<<	 I<<
 RCVR	 Ch +	 RCVR Play	 Play
 RCVR CH-/Disc-	 Ch -	 RCVR >>I	 >>I
 RCVR Vol+	 Vol +	 RCVR <<	 <<
 RCVR Vol-	 Vol -	 RCVR Stop	 Stop
 RCVR CH Sel / Top Menu	 Shift + Menu	 RCVR >>	 >>
 RCVR CH Sel / Top Menu	 D. Menu	 RCVR Rec /	 Rec
 RCVR Test / Menu	 Menu	 RCVR Play Rev.	 Pause
 RCVR Audio Sel / TV/VCR	 TV/R	 RCVR Input Sel. 1	 1
 RCVR Muting	 Mute	 RCVR Input Sel. 2	 2
 RCVR Up	 Up	 RCVR Input Sel. 3	 3
 RCVR Left	 Left	 RCVR Input Sel. 4	 4
 RCVR Enter	 Ok	 RCVR Input Sel. 5	 5
 RCVR Right	 Right	 RCVR Input Sel. 6	 6



TUN



 
 
 
 
 
 
 









 


 
 
 
 





Original		Replacement		Original		Replacement	
	DVD On		Power		DVD Play		Play
	DVD Standby		Shift + Power		DVD >>I		>>I
	DVD Sleep		Sleep		DVD <<		<<
	DVD Return		Back		DVD Stop		Stop
	DVD Setup		Options		DVD >>		>>
	DVD Disc+		Ch +		DVD Random		Rec
	DVD Disc-		Ch -		DVD Pause		Pause
	DVD Vol+		Vol +		DVD Eject		Exit
	DVD Vol-		Vol -		DVD Input Sel.		1
	DVD CH Sel / Top Menu		Shift + Menu		DVD Input Sel. CD		2
	DVD CH Sel / Top Menu		D. Menu		DVD Input Sel. V1		3
	DVD Test /		Menu		DVD Input Sel. V2		4
	DVD Audio Sel / TV/VCR		TV/R		DVD Input Sel.		5
	Muting		Mute		DVD Input Sel.		6
	DVD Angle /		Format		DVD Input Sel. V3		7
	DVD Subtitle / Level+		Subt		DVD Input Sel. V4		8
	DVD I<<		I<<		DVD Input Sel. V5		9



 


 
 


 


 
 



 



 
 


 

 

 



 

 

 



 

 



 



 






Original	Replacement	Original	Replacement
 DVD Input Sel. PH	 0		
 DVD 1	 Shift + 1		
 DVD 2	 Shift + 2		
 DVD 3	 Shift + 3		
 DVD 4	 Shift + 4		
 DVD 5	 Shift + 5		
 DVD 6	 Shift + 6		
 DVD 7	 Shift + 7		
 DVD 8	 Shift + 8		
 DVD 9	 Shift + 9		
 DVD 0	 Shift + 0		
 DVD +10 / --/--	 Guide		
 DVD Search/Enter	 Pre Ch		

Original	Replacement	Original	Replacement





Original		Replacement		Original		Replacement	
	On		Power		2		2
	Standby		Shift + Power		3		3
	Disc+		Ch +		4		4
	Vol+		Vol +		5		5
	Vol-		Vol -		6		6
	Muting		Mute		7		7
	Subtitle		Subt		8		8
	I<<		I<<		9		9
	Play		Play		0		0
	>>I		>>I		+10		Guide
	<<		<<				
	Stop		Stop				
	>>		>>				
	Pause		Pause				
	Random		Rec				
	Eject		Eject				
	1		1				

