





Original	Replacement
Power	Power
Display	Info
DVD / BD	Shift + 1
VCR / DVR	Shift + 2
CBL/SAT	Shift + 3
CD	Shift + 4
AUX	Shift + 5
TV / TAPE	Shift + 6
TUNER	Shift + 7
PORT	Shift + 8
Muting	Mute
CH/Disc/Album	Ch +
CH/Disc/Album-	Ch -
Vol+	Vol +
Vol-	Vol -
Up	Up
Left	Left

Original	Replacement
Enter	Ok
Right	Right
Down	Down
Setup	Options
Return	Back
Audio	Dual
I<<	I<<
>>I	>>I
<<	<<
Play	Play
>>	>>
Pause	Pause
Stop	Stop
Movie	Red
Music/Repeat	Green
Game/Random	Yellow
Stereo/Play Mode	Blue

 






 









 





 



 



 

 

 



 
 



 



 



 
 



 



 










	Original	Replacement	Original	Replacement
	1			
	2			
	3			
	4			
	5			
	6			
	7			
	8			
	9			
	0/11			
	+10/--/--10/Dimmer/D.Tuner			
	CLR/Sleep/12			







 




 
 
 
 



 

 



 

 



 

 

 



Original	Replacement	Original	Replacement
 Power BD/DVD	 Power	 Stop BD/DVD	 Stop
 Menu/Prev CH	 Menu	 Movie Tv/Search BD/DVD	 Red
 Top Menu/Guide BD/DVD	 Options	 Music/Repeat	 Green
 Setup BD/DVD	 Smart	 Game/Random	 Yellow
 Return BD/DVD	 Back	 Stereo/Play Mode BD/DVD	 Blue
 Audio BD/DVD	 Media	 1 BD/DVD	 1
 Enter BD/DVD	 Ok	 2 BD/DVD	 2
 Up BD/DVD	 Up	 3 BD/DVD	 3
 Down BD/DVD	 Down	 4 BD/DVD	 4
 Right BD/DVD	 Right	 5 BD/DVD	 5
 Left BD/DVD	 Left	 6 BD/DVD	 6
 I<< BD/DVD	 I<<	 7 BD/DVD	 7
 >>I BD/DVD	 >>I	 8 BD/DVD	 8
 << BD/DVD	 <<	 9 BD/DVD	 9
 >> BD/DVD	 >>	 0/11 BD/DVD	 0
 Play BD/DVD	 Play	 +10/--/-10/D.Tun/Dimmer BD/DVD	 Guide
 Pause/Play rev. BD/DVD	 Pause	 CLR/Sleep/12	 Pre Ch



BD/DVD



Original	Replacement
 CBL/SAT	 Text
 Muting Receiver	 Mute
 Vol+ Receiver	 Vol +
 Vol- Receiver	 Vol -
 Power CBL/SAT	 Shift + Power
 CH Disc/Album+ CBL/SAT	 Ch +
 CH Disc/Album- CBL/SAT	 Ch -
 Menu/Prev CH CBL/SAT	 Shift + Menu
 Top Menu/Guide CBL/SAT	 Shift + Options
 Return CBL/SAT	 Shift + Back
 Setup CBL/SAT	 Shift + Smart
 Up CBL/SAT	 Shift + Up
 Enter CBL/SAT	 Shift + Ok
 Down CBL/SAT	 Shift + Down
 Right CBL/SAT	 Shift + Right
 Left CBL/SAT	 Shift + Left
 Pause/Play rev. CBL/SAT	 Shift + Pause

Original	Replacement
 Stop CBL/SAT	 Shift + Stop
 << CBL/SAT	 Shift + Ch -
 >> CBL/SAT	 Shift + Ch +
 Play CBL/SAT	 3D
 Movie Tv/Search CBL/SAT	 Dual
 Music/Repeat CBL/SAT	 Subt
 Game/Random	 AV
 Stereo/Play Mode CBL/SAT	 Format
 1 CBL/SAT	 Shift + 1
 2 CBL/SAT	 Shift + 2
 3 CBL/SAT	 Shift + 3
 4 CBL/SAT	 Shift + 4
 5 CBL/SAT	 Shift + 5
 6 CBL/SAT	 Shift + 6
 7 CBL/SAT	 Shift + 7
 8 CBL/SAT	 Shift + 8
 9 CBL/SAT	 Shift + 9



 





 
 















 


 
 
 


 


 
 
 

 
 



 
 

 

 

 

 

 
 





 





 


Original	Replacement
0/11 CBL/SAT	+  Shift + 0
DVD/BD	TV/R

Original	Replacement





Original	Replacement	Original	Replacement
 Power CD	 Power	 Stop CD	 Stop
 CH/Disc+ CD	 Ch +	 Movie Tv/Search	 Red
 CH/Disc- CD	 Ch -	 Music/Repeat	 Green
 Return CD	 Back	 Game/Random	 Yellow
 Setup CD	 Smart	 Stereo/Play Mode	 Blue
 Audio CD	 Media	 1 CD	 1
 Up CD	 Up	 2 CD	 2
 Down CD	 Down	 3 CD	 3
 Right CD	 Right	 4 CD	 4
 Left CD	 Left	 5 CD	 5
 Enter CD	 Ok	 6 CD	 6
 I<< CD	 I<<	 7 CD	 7
 >>I CD	 >>I	 8 CD	 8
 << CD	 <<	 9 CD	 9
 >> CD	 >>	 0/11 CD	 0
 Play CD	 Play	 +10/--/-10/D.Tun/Dimmer CD	 Guide
 Pause CD	 Pause	 CLR/Sleep/12	 Pre Ch



 


 
 





 
 


 









 


 




 


 
 



 


 


 





 
 

 
 

 

 



 
 
 

CD



Original		Replacement		Original		Replacement	
	Muting Receiver		Mute				
	Vol+ Receiver		Vol +				
	Vol- Receiver		Vol -				
	CD		TV/R				





Original	Replacement	Original	Replacement
 Power Receiver Zone 2	 Power	 >> Zone 2	 >>
 Muting Receiver	 Mute	 << Zone 2	 <<
 Vol+ Zone 2	 Vol +	 Pause Zone 2	 Pause
 Vol- Zone 2	 Vol -	 Stop Zone 2	 Stop
 CH Disc/Album+ Zone 2	 Ch +	 Movie Tv/Search Zone 2	 Red
 CH Disc/Album- Zone 2	 Ch -	 Music/Repeat	 Green
 Up Zone 2	 Up	 Game/Random	 Yellow
 Enter Zone 2	 Ok	 Stereo/Play Mode Zone 2	 Blue
 Down Zone 2	 Down	 1 Zone 2	 1
 Right Zone 2	 Right	 2 Zone 2	 2
 Left Zone 2	 Left	 3 Zone 2	 3
 Return Zone 2	 Back	 4 Zone 2	 4
 Setup Zone 2	 Smart	 5 Zone 2	 5
 Audio Zone 2	 Media	 6 Zone 2	 6
 I<< Zone 2	 I<<	 7 Zone 2	 7
 >>I Zone 2	 >>I	 8 Zone 2	 8
 Play Zone 2	 Play	 9 Zone 2	 9







Original	Replacement	Original	Replacement
 0/11 Zone 2	 0		
 +10/--/--10/D.Tun/Dimmer Zone 2	 Guide		
 CLR/Sleep/12	 Pre Ch		

