



 
 

 

 
 
 





 





 


 

 









 





Original	Replacement	Original	Replacement
	Power		Power
	Mute		Mute
	Play		Play
	Pause		Pause
	Stop		Stop
	USB		Media
	Rec		Rec
	Info		Info
	I<<<		I<<<
	>>>I		>>>I
	<<<		<<<
	>>>		>>>
	Red		Red
	Green		Green
	Yellow		Yellow
	Blue		Blue
	FAV		Pre Ch
			SAT
			Menu
			Exit
			Up
			Down
			Right
			Left
			Ok
			Subt
			Text
			Back
			Dual
			Ch +
			Ch -
			1
			2
			3





Original		Replacement		Original		Replacement	
4	4	4	4				
5	5	5	5				
6	6	6	6				
7	7	7	7				
8	8	8	8				
9	9	9	9				
0	0	0	0				
EPG	EPG	GUIDE	Guide				
TV/RADIO	Tv/Radio	SEARCH TV/R	TV/R				

