
 
 

 


 

 
 

 



 



 
 


 

 


 

 

 

 

 


Original	Replacement	Original	Replacement
On/Off	 Power	OK Enter	 Ok
Mute	 Mute	Menu Right	 Right
Update	 3D	Menu Off	 Exit
Txt Stop	 Stop	Menu Down	 Down
Reveal	 Smart	Back	 Back
Subt.List	 Subt	Volume+	 Vol +
Sleep Timer	 Sleep	Chan.Up	 Ch +
Info	 Info	Volume-	 Vol -
Return TV	 TV/R	Menu audio	 Dual
Menu video	 D. Menu	Chan.Down	 Ch -
Text	 Text	1	 1
Txt Expand	 Eject	2	 2
TV/AV	 AV	3	 3
Menu	 Menu	4	 4
Menu Up	 Up	5	 5
Display	 +  Shift + Info	6	 6
Menu Left	 Left	7	 7



Original	Replacement	Original	Replacement
8	 8		
9	 9		
Guide -/-- 1.	 GUIDE		
0/10	 0		
Red	 A		
Green	 B		
Yellow	 C		
Audio+	 OPT		
Blue	 D		
AV 2	 SHIFT +  TIMER AV		
Tune-	 <<		
Tune+	 >>		
Nicam/Mono	 LIST		
Browse	 MEDIA		

