



Original		Replacement		Original		Replacement	
	Power		Power		8		8
	Setup		Options		9		9
	DSK		Format		0		0
	HDMI/AV		AV		Vol+		Vol +
	Edit		D. Menu		Vol-		Vol -
	Copy		Guide		Mute		Mute
	Movie		Red		Up		Up
	Photo		Green		Down		Down
	Music		Yellow		Right		Right
	DIR		Blue		Left		Left
	1		1		Enter		Ok
	2		2		Repeat		Text
	3		3		Step		3D
	4		4		Pause		Pause
	5		5		Play		Play
	6		6		Stop		Stop
	7		7		>>		>>





	Original	Replacement	Original	Replacement
	<<	 <<		
	>>	 >>		
	<<	 <<		
	Audio	 SOUND DUAL		Dual
	Sub-T	 AD SUBT		Subt
	PSM	 DISC NAV LIST		List
	Info	 DISPLAY INFO		Info
	Home	 HOME SMART		Smart
	Exit	 CLEAR EXIT		Exit
	S.Show	 FAV PRE-CH		Pre Ch
	DVD	 APP MEDIA		Media

