







 

Original	Replacement
 Power	 Power
 Mute	 Mute / Dimmer
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 TV / Radio	 TV/Radio /
 0	 0
 Recall	 Back / Return
 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat

Original	Replacement
 Blue	 Blue / Prime Video / Random
 TTX	 Text / Goto
 Timer	 Sleep / Timer
 TVG	 Guide / EPG / -/--
 Info	 Info / Angle
 List	 Smart / List
 FAV	 Fav / Marker / PC
 Home	 Menu / Home
 Sub-T	 Subtitle / EQ
 Audio	 Audio / Lang I/II
 X	 Exit / Cancel / Clear
 Up / CH+	 Up
 Up / CH+	 CH+ / Page+
 Left / Vol-	 Vol-
 Left / Vol-	 Left
 OK	 OK
 Right / Vol+	 Right





Original	Replacement
 Right / Vol+	 Vol+
 Rec	 Rec / Rec Mode
 Down / CH-	 Down
 Down / CH-	 CH- / Page-
 Media	 Display / Media
 Play / Pause	 Play / Slow
 Play / Pause	 Pause / Step / Freeze
 Stop	 Stop / Hold
 Device	 D.Menu / Top
 V-Format	 Picture / Format
 <<	 << / Tune-
 >>	 >> / Tune+
 I<<	 I<< / Preset-
 >>I	 >>I / Preset+
 Goto	 Shift + Goto / Text /
 A-B	 Shift + Yellow / YouTube /
 Repeat	 Shift + Green / APP / Repeat

Original	Replacement
 Zoom	 Zoom / Size

