



Original	Replacement
	 Vol+
	 CH+ / Page+
	 Vol-
	 Power
	 CH- / Page-
	 Mute / Dimmer
	 1
	 2
	 3
	 4
	 5
	 6
	 7
	 8
	 9
	 Back / Return
	 Fav / Marker / PC

Original	Replacement
	 0
	 Display / Media
	 Text / Goto
	 Stop / Hold
	 Smart / List
	 Zoom / Size
	 I<< / Preset-
	 Left
	 Menu / Home
	 OK
	 >>I / Preset+
	 Right
	 Audio / Lang I/II
	 Setup / OPT /

