





 







 


 






 

 

 





 













 


 

 


 





 




 








Original	Replacement	Original	Replacement
 Power	 Power	 Right	 Right
 Menu	 Menu	 Left	 Left
 Text	 Text	 Red	 Red
 [+]/Aspect	 Format	 Green	 Green
 [≡◆]/STTL	 Subt	 Yellow	 Yellow
 Input TV	 TV/R	 Blue	 Blue
 Input AV	 AV	 Mute	 Mute
 i	 Info	 Vol+	 Vol +
 X/Exit	 Exit	 Vol-	 Vol -
 Back/Return	 Back	 CH+	 Ch +
 Option	 Options	 CH-	 Ch -
 Home	 Smart	 1	 1
 APPS	 Media	 2	 2
 Guide	 Guide	 3	 3
 OK	 Ok	 4	 4
 Up	 Up	 5	 5
 Down	 Down	 6	 6

Original	Replacement	Original	Replacement
 Power	 Power	 TV	 TV
 Menu	 Menu	 DVD	 DVD
 Text	 Text	 SAT	 SAT
 [+]/Aspect	 [+]/Aspect	 AUX	AUX
 [≡◆]/STTL	 [≡◆]/STTL	 PLAY MODE	 PLAY MODE
 Input TV	 Input TV	 REC MODE	REC MODE
 Input AV	 Input AV	 Play	 Play
 i	 i	 Pause	 Pause
 X/Exit	 X/Exit	 Stop	 Stop
 Back/Return	 Back/Return	 Fast Rewind	 Fast Rewind
 Option	 Option	 Fast Forward	 Fast Forward
 Home	 Home	 Sound	 Sound
 APPS	 APPS	 AD	 AD
 Guide	 Guide	 SETTINGS	 SETTINGS
 OK	 OK	 LIST	 LIST
 Up	 Up	 DUAL	 DUAL
 Down	 Down	 SUBT	 SUBT
		 OPT	 OPT
		 ECO	 ECO
		 3D	 3D
		 TIMER	 TIMER
		 AV	 AV
		 MUTE	 MUTE
		 Vol+	 Vol +
		 Vol-	 Vol -
		 CH+	 Ch +
		 CH-	 Ch -
		 1	 1
		 2	 2
		 3	 3
		 4	 4
		 5	 5
		 6	 6
		 7	 7
		 8	 8
		 9	 9
		 0	 0
		 FAV	 FAV
		 PRE-CH	 PRE-CH
		 A	 A
		 B	 B
		 C	 C
		 D	 D





Original		Replacement		Original		Replacement	
	7		7				
	8		8				
	9		9				
	0		0				
	Off Timer		3D				
	Last View		Pre Ch				
	?/Help		D. Menu				
	Play		Play				
	>>		>>				
	<<		<<				
	Pause		Pause				
	>>		>>				
	<<		<<				
	Stop		Stop				
	Rec		Rec				

