



| Original | Replacement              |
|----------|--------------------------|
|          | Power                    |
|          | Shift + Display / Media  |
|          | Shift + AV / Input / RDS |
|          | AV / Input / RDS         |
|          | Picture / Format         |
|          | Menu / Home              |
|          | Shift + Up               |
|          | D.Menu / Top             |
|          | Info / Angle             |
|          | Exit / Cancel / Clear    |
|          | Smart / List             |
|          | Display / Media          |
|          | Up                       |
|          | Guide / EPG / -/--       |
|          | Left                     |
|          | OK                       |
|          | Right                    |

| Original | Replacement                 |
|----------|-----------------------------|
|          | Setup / OPT /               |
|          | Down                        |
|          | Back / Return               |
|          | Red / Netflix / Search      |
|          | Green / APP / Repeat        |
|          | Yellow / YouTube / Repeat   |
|          | Blue / Prime Video / Random |
|          | Text / Goto                 |
|          | Subtitle / EQ               |
|          | Shift + Info / Angle        |
|          | Shift + Stop /              |
|          | 1                           |
|          | 2                           |
|          | 3                           |
|          | 4                           |
|          | 5                           |
|          | 6                           |





| Original     | Replacement          |
|--------------|----------------------|
| 7            | 7                    |
| 8            | 8                    |
| 9            | 9                    |
| Mute         | Mute / Dimmer        |
| 0            | 0                    |
| OIO          | Shift + Smart / List |
| Vol+         | Vol+                 |
| CH+          | CH+ / Page+          |
| Vol-         | Vol-                 |
| CH-          | CH- / Page-          |
| Power Down   | Shift + Power        |
| Programme    | Shift + CH- /        |
| Programme Up | Shift + CH+ /        |
| <</ <<       | << / Tune-           |
| Play         | Play / Slow          |
| >>/>>        | >> / Tune+           |
| Stop         | Stop / Hold          |

| Original   | Replacement           |
|------------|-----------------------|
| Pause/Step | Pause / Step / Freeze |
| Rec        | Rec / Rec Mode        |
|            |                       |
|            |                       |
|            |                       |
|            |                       |
|            |                       |
|            |                       |
|            |                       |
|            |                       |
|            |                       |
|            |                       |
|            |                       |
|            |                       |
|            |                       |
|            |                       |
|            |                       |
|            |                       |

