



Original	Replacement
Power	Power
Quick OSD	Blue
FL Select	List
Open/Close	Eject
Advanced Disc Review	TV/R
AV Enhancer	AV
Advanced	3D
Sound	Sleep
Picture Mode	Format
Manual Skip	Smart
Quick Replay	Media
1	1
2	2
3	3
4	4
5	5
6	6

Original	Replacement
7	7
8	8
9	9
0	0
+10	Guide
Cancel	Exit
I<< Skip	I<<
Skip >>I	>>I
<< Slow/Search	<<
Slow/Search >>	>>
Stop	Stop
Pause	Pause
Play	Play
Top Menu/Direct Navigator	Shift + Menu
Menu/Play List	Menu
Functions	D. Menu
Return	Back



