 

 



 

 








 
 
 
 
 
 
 
 
 
 
 
 






 





 










 



 

 
 

 

 

 









 



 

 
 
 
 



 
 
 
 

 

 




 
 




Original	Replacement	Original	Replacement
	Power		Power
	TV Power		Shift + Power
	TV TV/AV		AV
	TV Volume +		Shift + Vol +
	TV Volume -		Shift + Vol -
	DVD		Smart
	FM		Media
	Ext-In		Shift + AV
	One Touch Play		List
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	>≡ 10 / -/--		Guide
	Cancel		Exit
	Volume +		Vol +
	Volume -		Vol -
	I<< / Skip -		I<<
	>>I / Skip +		>>I
	<< / Slow/Search		<<
	>> / Slow/Search		>>
	Stop		Stop
	Pause		Pause
	Play		Play
	Top Menu / Direct Navigator		Shift + Menu
	Top Menu / Direct Navigator		D. Menu
	Menu / Play List		Menu
	Up		Up





Original	Replacement	Original	Replacement
	Right		Right
	Down		Down
	Left		Left
	Enter		Ok
	Functions /		3D
	Return / Setup		Back
	Return / Setup		Options
	SW Level /		Subt
	EQ / SRD ENH		Format
	C.Focus		Blue
	S.SRD / Dolby PL		Dual
	FL Display / Sleep		Info
	FL Display / Sleep		Sleep
	Test / Auto		Text
	Play Mode / CH Select		Shift + Ok
	Play Mode / CH Select		Shift + Play
	Muting		Mute

