



Original	Replacement
Power	Power
Power Tv	Shift + Power
Vol+ Tv	Vol+
AV/Input Tv	AV / Input / RDS
Vol- Tv	Vol-
1	1
2	2
3	3
Open/Close	Eject / Surround
4	4
5	5
6	6
PIP	Picture / Format
7	7
8	8
9	9
Audio/Secondary	Sound / Title

Original	Replacement
Cancel	Shift + Exit / Cancel / Clear
0	0
Audio	Audio / Lang I/II
Internet	Smart / List
<< Search	<< / Tune-
Play	Play / Slow
>> Search	>> / Tune+
I<</Skip	I<< / Preset-
Pause	Pause / Step / Freeze
>>I/Skip	>>I / Preset+
Status	Info / Angle
Stop	Stop / Hold
Exit	Exit / Cancel / Clear
Pop-Up Menu	Display / Media
Top Menu	D.Menu / Top
Up	Up
Home	Menu / Home





Original	Replacement	Original	Replacement
 Left	 Left		
 OK	 OK		
 Right/II>	 Right		
 Option	 Setup / OPT /		
 Down	 Down		
 Return	 Back / Return		
 Red	 Red / Netflix / Search		
 Green	 Green / APP / Repeat		
 Yellow	 Yellow / YouTube / Repeat		
 Blue	 Blue / Prime Video / Random		

