



| Original | | Replacement | | Original | | Replacement | |
|----------|----------------|-------------|------------------|----------|---------------------------|-------------|-----------------------|
| | Power | | Power | | 9 | | 9 |
| | Power Tv | | Shift + Power | | Vol+ | | Vol+ |
| | Vol+ Tv | | Shift + Vol+ | | Cancel | | Exit / Cancel / Clear |
| | DVD | | Shift + 2 | | 0 | | 0 |
| | TV/AV Tv | | TV/Radio / | | +10 | | Guide / EPG / --- |
| | Vol- Tv | | Shift + Vol- | | Vol- | | Vol- |
| | FM | | Shift + 5 | | I<</Skip Down | | I<< / Preset- |
| | 1 | | 1 | | >>/Skip Up | | >>I / Preset+ |
| | 2 | | 2 | | << Slow Search | | << / Tune- |
| | 3 | | 3 | | Slow Search >> | | >> / Tune+ |
| | EXT-IN | | Eject / Surround | | Stop | | Stop / Hold |
| | 4 | | 4 | | Pause | | Pause / Step / Freeze |
| | 5 | | 5 | | Play | | Play / Slow |
| | 6 | | 6 | | Top Menu/Direct Navigator | | Smart / List |
| | One Touch Play | | Display / Media | | Up | | Up |
| | 7 | | 7 | | Menu/Play List | | Menu / Home |
| | 8 | | 8 | | Left | | Left |



