



Original	Replacement		
	Power		Power
	Picture		Picture / Format
	TV Input		Audio / Lang I/II
	AV Input		TV/Radio /
	Menu		Menu / Home
	Text		Text / Goto
	STTL		Subtitle / EQ
	List/Provider		AV / Input / RDS
	i		Info / Angle
	Exit		Exit / Cancel / Clear
	Home		Shift + Menu /
	Netflix		Shift + Red / Netflix /
	Left		Left
	Up		Up
	Right		Right
	Guide		Guide / EPG / -/--
	OK		OK

Original	Replacement		
	Option		Setup / OPT /
	Down		Down
	Back/Return		Back / Return
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random
	Vol+		Vol+
	Mute		Mute / Dimmer
	CH+		CH+ / Page+
	Vol-		Vol-
	CH-		CH- / Page-
	1		1
	2		2
	3		3
	4		4
	5		5





Original		Replacement		Original	Replacement
	6		6		
	7		7		
	8		8		
	9		9		
	?/eHelp		Shift + Info / Angle		
	0		0		
	Last View		Fav / Marker / PC		
	<<		<< / Tune-		
	Play		Play / Slow		
	>>		>> / Tune+		
	<<		<< / Preset-		
	Pause		Pause / Step / Freeze		
	>>		>> / Preset+		
	My App		Zoom / Size		
	Stop		Stop / Hold		
	REC		Rec / Rec Mode		

