 





 







 









 






















Original	Replacement	Original	Replacement
	Power		Power
	Input		AV / Input / RDS
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	Guide		Guide / EPG / -/--
	0		0
	Infos		Info / Angle
	Vol +		Vol+
	Mute		Mute / Dimmer
	Prog +		CH+ / Page+
	Vol -		Vol-
	Format		Picture / Format
	Prog -		CH- / Page-
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random
	Menu		Menu / Home
	Media		Display / Media
	Up		Up
	Left		Left
	OK		OK
	Right		Right
	Back		Back / Return
	Down		Down
	Exit		Exit / Cancel / Clear
	AD		Audio / Lang I/II





Original	Replacement
Subtitles	Subtitle / EQ
Text	Text / Goto
Radio	TV/Radio /
I<<	I<< / Preset-
<<	<< / Tune-
>>	>> / Tune+
>>I	>>I / Preset+
Rec	Rec / Rec Mode
Stop	Stop / Hold
Play	Play / Slow
Pause	Pause / Step / Freeze

Original	Replacement

