 




 














 





Original	Replacement
	 Power
	 AV / Input / RDS
	 Text / Goto
	 Display / Media
	 Subtitle / EQ
	 Picture / Format
	 Green / APP / Repeat
	 Red / Netflix / Search
	 Yellow / YouTube / Repeat
	 Blue / Prime Video / Random
	 Guide / EPG / -/--
	 Info / Angle
	 Up
	 Right
	 Down
	 OK
	 Setup / OPT /

Original	Replacement
	 Left
	 Back / Return
	 Vol+
	 Menu / Home
	 Exit / Cancel / Clear
	 Vol-
	 Mute / Dimmer
	 CH+ / Page+
	 CH- / Page-
	 1
	 2
	 3
	 4
	 5
	 6
	 7
	 8



